



Connection Diagram

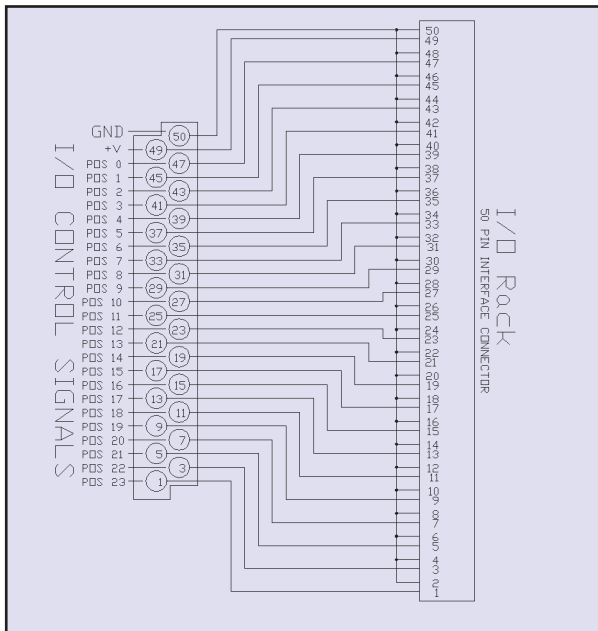

IDC50-TB26 HDX™ & UNI™ - Series I/O Rack Interfaces

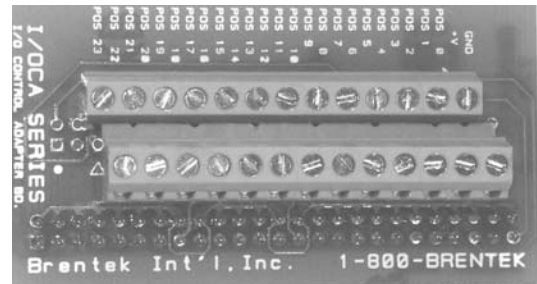

CONNECTION ASSIGNMENTS IDC50-TB26 TO UNI-Series I/O RACKS

IDC50 TERMINAL NAME	SINGLE I/O MODULE CONTROL LINE	DUAL I/O MODULE CONTROL LINE	IDC50 CONNECTOR PIN NAME
POS 0	0	0A	47
POS 1	1	1A	45
POS 2	2	2A	43
POS 3	3	3A	41
POS 4	4	4A	39
POS 5	5	5A	37
POS 6	6	6A	35
POS 7	7	7A	33
POS 8	--	0B	31
POS 9	--	1B	29
POS 10	--	2B	27
POS 11	--	3B	25
POS 12	--	4B	23
POS 13	--	5B	21
POS 14	--	6B	19
POS 15	--	7B	17
+V	N/C	N/C	49
GND	GND	GND	2-50 EVEN Nos.

CONNECTION ASSIGNMENTS IDC50-TB26 TO HDX-Series I/O RACKS

IDC50 TERMINAL NAME	SINGLE I/O MODULE CONTROL LINE	DUAL I/O MODULE CONTROL LINE	IDC50 CONNECTOR PIN NAME
POS 0	0	0A	47
POS 1		0B	45
POS 2	1	1A	43
POS 3		1B	41
POS 4	2	2A	39
POS 5		2B	37
POS 6	3	3A	35
POS 7		3B	33
POS 8	4	4A	31
POS 9		4B	29
POS 10	5	5A	27
POS 11		5B	25
POS 12	6	6A	23
POS 13		6B	21
POS 14	7	7A	19
POS 15		7B	17
POS 16	8	8A	15
POS 17		8B	13
POS 18	9	9A	11
POS 19		9B	9
POS 20	10	10A	7
POS 21		10B	5
POS 22	11	11A	3
POS 23		11B	1
+V	+V (JUMPERED)	+V (JUMPERED)	49
GND	GND	GND	2-50 EVEN Nos.